

QUICK START GUIDE



RHINO C6

A 6" Android phone built for enterprise.

Included In This Box

- RHINO C6/C6R
- USB-C cable (USB 2.0)
- Charger block
- Quick start guide
- SIM pin



Get Started

Press and hold the power button for 4 seconds until the device turns on and vibrates.

This device may be pre-provisioned by your organization, so the Android setup flow you're used to may be interrupted by the Android zero-touch management prompt.

User Manual

Download the full user manual for this device at support.rhinomobility.com/devices/c6

Software and Security Updates

Check for the latest software and security updates at support.rhinomobility.com/security/releases

Customer Support

Online: Go to support.rhinomobility.com

Email: support@rhinomobility.com

Warranty

Your RHINO device is protected by a one (1) year limited liability warranty against manufacturing defects. This does not affect your statutory rights.

Further warranty can be found at rhinomobility.com/warranty


CE Statement

1. The adapter shall be installed near the equipment and shall be easily accessible.
2. Do not use the device in an environment at too high or too low a temperature, never expose the device to strong sunshine or wet environments. The operating temperature for the product is 0°C to 45°C (while charging is 40°C).
3. Caution, risk of explosion if battery is replaced by an incorrect model. Dispose of used batteries according to the instructions.
4. The SAR limit of Europe is 2.0 W/kg. This device was tested for typical body-worn operations with the back of the device kept 5mm from the body. To maintain compliance with RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements and should be avoided.

 
5. RF frequency and power:

WWAN		
Frequency Band	Maximum output power(dBm)	
GSM 900	33.00	
GSM 1800	30.00	
WCDMA Band I	24.00	
LTE Band 1	24.00	
LTE Band 3	23.50	
LTE Band 7	22.00	
LTE Band 20	24.00	
WLAN		
Standard	Frequency	EIRP Power(dBm)
WIFI 2.4G	2.4~2.4835GHz	19.98
	5.15~5.25GHz	17.88
WIFI 5G	5.25~5.35GHz	17.51
	5.47~5.725GHz	17.73
	5.725~5.825GHz	13.71
BLUETOOTH		
Bluetooth Version	EIRP Power(dBm)	
EDR	13.73	
LE	9.26	
NFC		
Frequency	13.56MHz	-19.00 dBμA/m at 10m

6. The Wi-Fi function is restricted to indoor use only when operating in the 5150 MHz to 5350 MHz frequency range.

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	HR	IT	CY	LV	LT
	LU	HU	MT	NL	AT	PL	PT
	RO	SI	SK	FI	SE	UK(NI)	

7. Prevention of hearing loss:



Manufacturer Information

Rhino Mobility LLC

8 The Green, Suite A, Dover, Delaware, 19901, USA

EU and UKCA Regulatory Conformance

Hereby, Rhino Mobility LLC declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and Radio Equipment Regulations 2017. For the declaration of conformity, go to support.rhinomobility.com/devices/c6

Manufacturer: Rhino Mobility LLC
8 The Green, Suite A, Dover, Delaware 19901, USA
© 2023 Rhino Mobility™. All rights reserved.
Not intended for consumer use or resale.